

# ZERO GRAVITY WAND



## MOTORIZED FOOTREST

Automatically raise and lower the footrest to your desired position.



## MOTORIZED BACKREST

Automatically recline the backrest to an unlimited number of positions at the simple touch of a button.



## MOTORIZED HEADREST

Adjust the headrest for optimal head & neck relief.



## MEMORY BUTTONS

There are two memory buttons that allow you to save your preferred chair positions.



## HOME BUTTON

Simply press and hold to initiate and return the recliner to the fully upright position.



## ZERO GRAVITY

One push ZG button that automatically places the chair in the preset zero gravity position for optimal health and wellness benefits.